


# HOW TO CHANGE SIDE FRICTION PADS

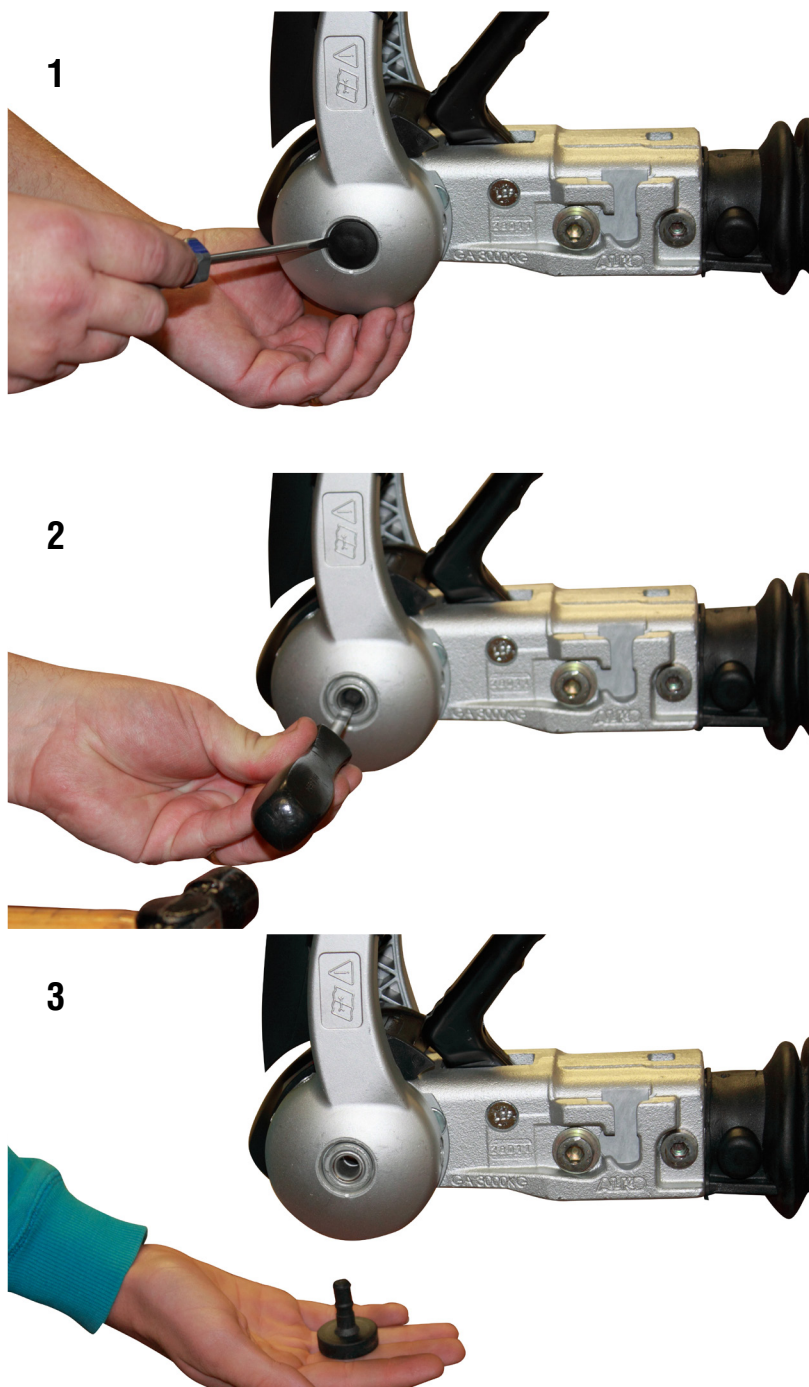

The side friction pads in the AKS Stabilisers should be monitored for wear, and replaced or cleaned as necessary.

## CHANGING SIDE FRICTION PADS ON AN AKS 3004 STABILISER

- 1 Prise away the protective cap. The caps may be either red or black in colour but the same method applies.
- 2 Insert the end of a screwdriver into the hole created by the removal of the cap, and tap gently with a hammer.
- 3 The friction pad will drop out of the bottom of the stabiliser.

Repeat the process for the opposite side.

To replace the cleaned or new friction pads, simply insert the friction pad into head of the stabiliser and click into place.

HOW TO guides are also available for cleaning and monitoring friction pads.

Note: It is not necessary to adjust the friction pads

Replacement friction pads available at <http://shop.al-ko.co.uk>

This HOW TO guide is suitable for both the original style, red, AKS 3004 Stabilisers and the newer style, black, AKS 3004 Stabilisers as pictured.

Similar instructions apply for the AKS 1300 Stabilisers, with the following clarifications. 1- Instead of removing the protective caps, you must loosen the retaining pin for removal. 2- Upon replacement ensure the ball race and washers are also reinserted. 3- Secure replacement with a new retaining pin.